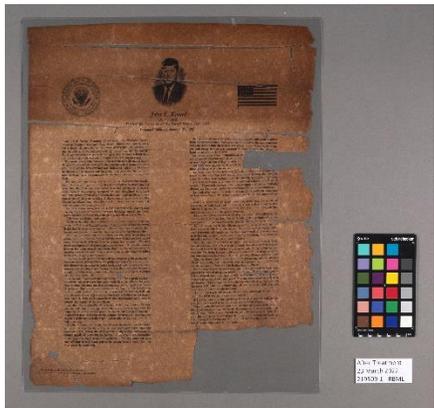


## GWENDOLYN BROOKS PAPERS TREATMENT RECORD

<b>Treatment No.</b>	219509	<b>Barcode</b>	30112128497556
<b>Treatment by</b>	Yungjin Shin	<b>Treatment Date</b>	03/23/2022

<p><b>Before Treatment</b></p> 	<b>Item #</b>	S30-B1400S-Item 1
	<p>Temporary Box                      - [Extremely Fragile Papers]                      - John F. Kennedy Inaugural Address January 20, 1961                      (original box: 53A, Newsclippings, Personal Interest)</p>	
	<b>Material</b>	Paper
	<b>Physical Description</b>	Brown vegetable parchment (?) paper, printed in black. Black ball-point pen writing on verso, "A gift to me from Mrs. Gladys Cook, Chicago". (Dimensions: W 30cm x L 37.7cm)
	<b>Condition</b>	Extremely brittle (crispy). Paper is in pieces, broken along the folds.
<p><b>After Treatment</b></p> 	<b>Treatment</b>	<ul style="list-style-type: none"> <li>• Cleaned the surface using cosmetic sponges.</li> <li>• Humidified the item in humidification chamber for 20 mins.</li> <li>• Dried in hard/soft sandwich (mat board-Reemay-object-Reemay-4 layers of felt-Plexiglas) under many heavy weights over the weekend.</li> <li>• Fully encapsulated in 5-mil mylar sheets.</li> </ul>
	<b>Treatment Hours</b>	1.5 hours

<p style="text-align: center;"><b>Before Treatment</b></p> 	<table border="1"> <tr> <td data-bbox="701 283 873 336"><b>Item #</b></td> <td data-bbox="873 283 1429 336">S30-B1400S-Item 2</td> </tr> <tr> <td colspan="2" data-bbox="701 336 1429 541">           Temporary Box            - [Extremely Fragile Papers]            - Holy Matrimony Certificate, Keziah Wims and David Brooks (original box: 71A, Papers of others; Keziah and David Brooks)         </td> </tr> <tr> <td data-bbox="701 541 873 588"><b>Material</b></td> <td data-bbox="873 541 1429 588">Paper</td> </tr> <tr> <td data-bbox="701 588 873 697"><b>Physical Description</b></td> <td data-bbox="873 588 1429 697">           Color printed with floral design on thick paper. Blank on verso.            (Dimensions: W 30.4cm x L 37.8cm)         </td> </tr> <tr> <td data-bbox="701 697 873 802"><b>Condition</b></td> <td data-bbox="873 697 1429 802">           Extremely brittle. Loss on top center. Many tears and small losses along the edges and folds.         </td> </tr> </table>	<b>Item #</b>	S30-B1400S-Item 2	Temporary Box - [Extremely Fragile Papers] - Holy Matrimony Certificate, Keziah Wims and David Brooks (original box: 71A, Papers of others; Keziah and David Brooks)		<b>Material</b>	Paper	<b>Physical Description</b>	Color printed with floral design on thick paper. Blank on verso. (Dimensions: W 30.4cm x L 37.8cm)	<b>Condition</b>	Extremely brittle. Loss on top center. Many tears and small losses along the edges and folds.
<b>Item #</b>	S30-B1400S-Item 2										
Temporary Box - [Extremely Fragile Papers] - Holy Matrimony Certificate, Keziah Wims and David Brooks (original box: 71A, Papers of others; Keziah and David Brooks)											
<b>Material</b>	Paper										
<b>Physical Description</b>	Color printed with floral design on thick paper. Blank on verso. (Dimensions: W 30.4cm x L 37.8cm)										
<b>Condition</b>	Extremely brittle. Loss on top center. Many tears and small losses along the edges and folds.										
<p style="text-align: center;"><b>After Treatment</b></p> 	<table border="1"> <tr> <td data-bbox="701 802 873 1717"><b>Treatment</b></td> <td data-bbox="873 802 1429 1717"> <ul style="list-style-type: none"> <li>• Cleaned the surface using cosmetic sponges.</li> <li>• Humidified the item in humidification chamber for 15 mins. Dried in blotter/Reemay stacks over the weekend.</li> <li>• Secured the detached pieces from recto using wheat starch paste and Hanji tissue, to keep them temporarily in place when lining from verso.</li> <li>• Prepared thinned (skim milk consistency) wheat starch paste and a piece of Hanji (Korean paper, series 3, 13gsm), cut a little bigger than the object.</li> <li>• Pasted out the Hanji piece on a mylar sheet. Attached the Hanji to the verso of the object. Blotted the back of the tissue using blotter. Dried between Reemay/blotter stack overnight. Switched the blotter after the first 30mins.</li> <li>• After dried, trimmed the excess tissue. Rehoused in mylar sleeve.</li> </ul> </td> </tr> <tr> <td data-bbox="701 1717 873 1785"><b>Treatment Hours</b></td> <td data-bbox="873 1717 1429 1785">2 hours</td> </tr> </table>	<b>Treatment</b>	<ul style="list-style-type: none"> <li>• Cleaned the surface using cosmetic sponges.</li> <li>• Humidified the item in humidification chamber for 15 mins. Dried in blotter/Reemay stacks over the weekend.</li> <li>• Secured the detached pieces from recto using wheat starch paste and Hanji tissue, to keep them temporarily in place when lining from verso.</li> <li>• Prepared thinned (skim milk consistency) wheat starch paste and a piece of Hanji (Korean paper, series 3, 13gsm), cut a little bigger than the object.</li> <li>• Pasted out the Hanji piece on a mylar sheet. Attached the Hanji to the verso of the object. Blotted the back of the tissue using blotter. Dried between Reemay/blotter stack overnight. Switched the blotter after the first 30mins.</li> <li>• After dried, trimmed the excess tissue. Rehoused in mylar sleeve.</li> </ul>	<b>Treatment Hours</b>	2 hours						
<b>Treatment</b>	<ul style="list-style-type: none"> <li>• Cleaned the surface using cosmetic sponges.</li> <li>• Humidified the item in humidification chamber for 15 mins. Dried in blotter/Reemay stacks over the weekend.</li> <li>• Secured the detached pieces from recto using wheat starch paste and Hanji tissue, to keep them temporarily in place when lining from verso.</li> <li>• Prepared thinned (skim milk consistency) wheat starch paste and a piece of Hanji (Korean paper, series 3, 13gsm), cut a little bigger than the object.</li> <li>• Pasted out the Hanji piece on a mylar sheet. Attached the Hanji to the verso of the object. Blotted the back of the tissue using blotter. Dried between Reemay/blotter stack overnight. Switched the blotter after the first 30mins.</li> <li>• After dried, trimmed the excess tissue. Rehoused in mylar sleeve.</li> </ul>										
<b>Treatment Hours</b>	2 hours										